

# User Manual

JOB: P\_6566 User Manual V5

DUE DATE: \_\_\_\_\_ TIME: \_\_\_\_\_ Printed at: 100 %

Approvals: Dat  Joanna  Kurt  PRINT PDF APPROVAL  
Jimmy  Engineering  With Changes  As is

**iPROTEC**

**RM230**

**RAIL-MOUNT** [230 lumen firearm light]



## QUALITY GUARANTEE

This product is guaranteed against all defects in workmanship and materials for the original owner for one year from the date of purchase. Damage to or failure of the flashlight or any component thereof due to alteration, misuse, battery leakage or lack of maintenance will void any and all guarantees. Damage by leakage of batteries should be taken up with the manufacturer of the battery using their damage claim instructions. For any additional information call 1-800-255-6061.

#6566

**USER MANUAL**

www.iprotec.com

## OPERATION

RM230 is equipped with 2 side buttons for easy right or left handed operation.

1. Press either button once for 100%
2. Press second time for 13%
3. Press button third time to turn off



### Instant Defensive Strobe Light Mode

While you are in any High or Low mode, the Defensive Strobe light mode can be instantly activated by double tapping the power button. Press button once again to turn it off.



230 Lumens 2.25 HRS Distance: 110 M  
40 Lumens 6 HRS Distance: 45 M  
230 Lumens 3.5 HRS Distance: 110 M



## BATTERY INSTALLATION

The RM230 is powered by 1 CR123A alkaline battery. **DO not use rechargeable battery as it may reduce performance capabilities and potentially cause damage to the gun light.**

1. To open battery compartment, unscrew the head of the light by turning it counter-clockwise.
2. Remove old battery and dispose of properly. Insert new battery negative end (-) toward the tail of the gun light.
3. Reattach head by turning clockwise.



CAUTION: Always remove gun light from firearm before attempting to change batteries or to perform any maintenance.

## MOUNTING INSTRUCTIONS

The RM230 is designed to mount on guns equipped with Picatinny or Weaver Rails. Patented universal mounting does not require tools to mount or unmount.

1. Turn slotted thumb lever screw (counter-clockwise) to widen adjustable hinge mount.
2. Press down on BOTH thumb levers to depress recoil bar.
3. Slide onto firearm rail until securely locked. Turn (clockwise) slotted thumb lever screw.

CAUTION: Make sure that the firearm has the safety on and is unloaded to avoid unintentional discharge. Make sure the mount is secure and test your flashlight for proper functionality.

