

HALO COMPACT BOLT™



OPERATING INSTRUCTIONS
PLEASE READ BEFORE OPERATING THIS EQUIPMENT

HALO BOLT COMPACT

Thank you for choosing HALO!


Powerful, compact and easy to use, the HALO BOLT COMPACT can safely jump start your car. In addition, you can use it to charge your phone, tablet or other electronic devices with 44,400 mWh of power! The HALO BOLT COMPACT also features a convenient LED floodlight.

TABLE OF CONTENTS

Included Items	4-5
Operating Instructions	6-12
Troubleshooting Guide	10
Specifications	13
Safety Precautions	13-14
Warranty and Contact Information	15-17



INCLUDED ITEMS

- HALO BOLT COMPACT
- Jumper Cables
- USB to Micro USB Cable
- Carrying Pouch
- Wall Charging Adapter

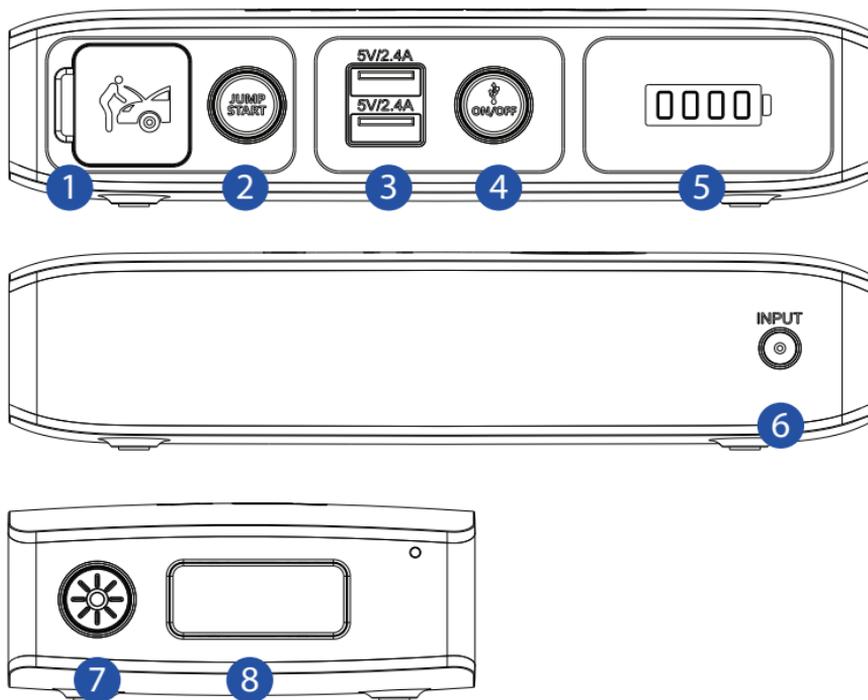

- 1 | Jump Start Output
- 2 | Jump Start Button
- 3 | USB Outputs
- 4 | USB ON/OFF Button
- 5 | LED Battery Indicators

- 6 | Charging Input
- 7 | Floodlight ON/OFF Button
- 8 | Floodlight/Emergency Light
- 9 | Jumper Cable Clamps
- 10 | Wall Charging Adapter

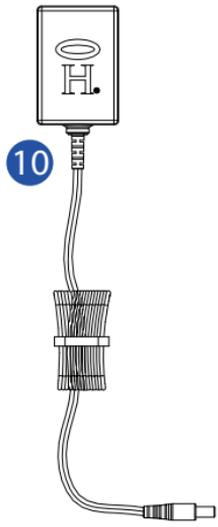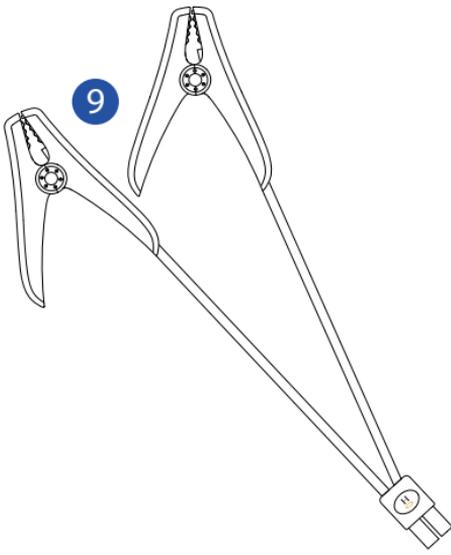


OPERATING INSTRUCTIONS

CHARGING YOUR HALO BOLT COMPACT

IMPORTANT: Before using your HALO BOLT COMPACT for the first time, fully charge it (so that pressing any button lights up all four LEDs on the LED Battery Indicators).

To charge your HALO BOLT COMPACT, use the provided Wall Charging Adapter, and plug the AC adapter plug into the charge input. Next, connect the charging adapter into a wall outlet. The HALO BOLT COMPACT will automatically begin charging. When the HALO BOLT COMPACT is fully charged, all four LED Battery Indicators will be solid green. (This could take up to 9 hours).

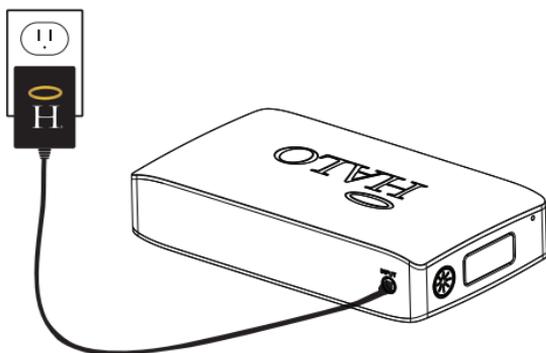

HALO BOLT COMPACT POWER LEVEL INDICATORS

INDICATOR LIGHTS

HOW TO READ

AMOUNT OF CHARGE



One solid light

0%-25%



Two solid lights

26%-50%



Three solid lights


51%-75%



Four solid lights


76%-100%

HALO BOLT COMPACT POWER LEVEL INDICATORS WHILE CHARGING:

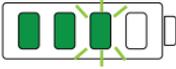INDICATOR LIGHTS	HOW TO READ	AMOUNT OF CHARGE
	First light blinking	0%-25%
	First light solid, second light blinking	26%-50%
	First two lights solid, third light blinking	51%-75%
	First three lights solid, fourth blinking	76%-100%
	All four lights solid	100% fully charged

JUMP STARTING YOUR VEHICLE WITH THE HALO BOLT COMPACT

1. Plug the jumper cables into the jump start output on the HALO BOLT COMPACT.

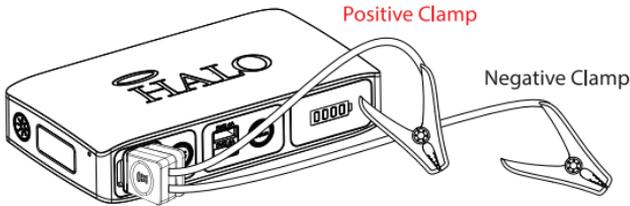


NOTE:

Make sure the jumper cables are fully plugged into the jump start output before trying to jump your vehicle.

2. Attach the jumper cable clamps to the vehicle battery.


- Red clamp on positive terminal (+)
- Black clamp on negative terminal (-)

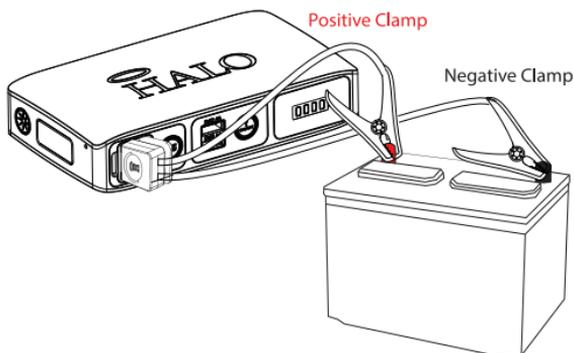

NOTE:

Do not touch red (positive) and black (negative) clamps together at any point. If the jump start button flashes red, the jumper cables have been connected incorrectly. If this flashing red condition occurs, disconnect the jumper cables from the HALO BOLT COMPACT and vehicle battery and restart the process from Step 1.

3. Press the "Jump Start" button and wait for solid green light.

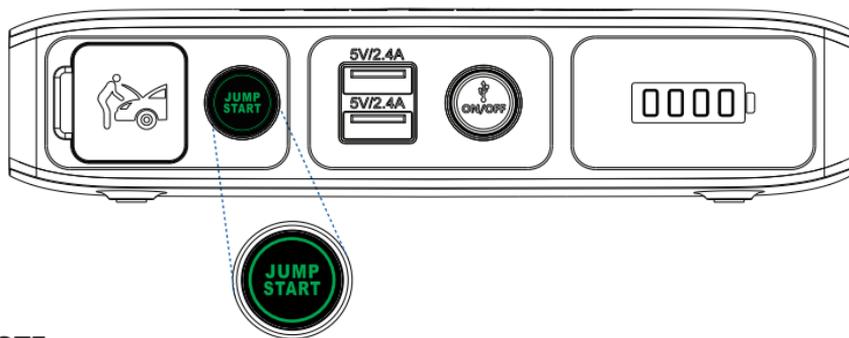

NOTE:

A flashing green light indicates safety checks are in progress.

⚠ Do not disconnect the jumper cables when the Jump Start button is illuminated solid green. If you wish to cancel a jump start attempt, simply press the Jump Start button again and the solid green light will turn off indicating that the jump start attempt has been cancelled.

4. Start your vehicle.

NOTE:

The HALO BOLT COMPACT will allow 3 consecutive jump start attempts after each time you press the jump start button. You must allow up to 15 seconds between each jump start attempt. During the 15 seconds, the jump start button will flash green while the HALO BOLT COMPACT performs its safety checks. Once the jump start button illuminates solid green, the HALO BOLT COMPACT is ready for the next jump start attempt.

If your vehicle does not start after three attempts, we recommend you consult a certified mechanic.

5. Disconnect the jumper cable clamps from the car battery.

NOTE:

The jump start function can not be used in conjunction with USB charging . Please ensure that you have not activated the USB output when attempting to jump start your vehicle.

JUMP START TROUBLESHOOTING TIPS

Condition	Potential Cause	Solution
The Jump Start button has been pressed but nothing happens	The USB ON/OFF Button has been pressed and is illuminated blue.	The jump start output can not be used in conjunction with the USB output. Ensure the USB output is off and then press the jump start button.
The Jump Start button shuts off unexpectedly	The HALO BOLT COMPACT is not sufficiently charged to jump start the vehicle.	Recharge the HALO BOLT COMPACT. Verify the HALO BOLT COMPACT has greater than a 50% charge.
	The HALO BOLT COMPACT detects that it is connected to a vehicle battery that does not require a jump start. This could indicate some other vehicle component is faulty.	It is recommended that you consult with a certified mechanic.
The Jump Start button flashes red	The jumper cables have not been properly connected to the vehicle battery.	Check the jumper cables and ensure that the red clamp is connected to the positive terminal (+) and the black clamp is connected to the negative terminal (-)
The Jump Start button flashes green continuously	The HALO BOLT COMPACT is waiting to be connected to a battery.	Check the jumper cables and ensure they are properly connected to the battery.
The HALO BOLT COMPACT battery indicators flash green.	The HALO BOLT COMPACT has detected a high temperature condition.	Disconnect the HALO BOLT COMPACT and allow it to cool for several minutes. Then try the jump start process again.
The Jump Start and On/Off button flashes red and blue	This could occur when attempting to jump start a vehicle while other electrical components (i.e. headlights, heater, radio, etc.) are on.	Turn off your headlights and any other components that may drain your car battery and try the jump start process again.
	The vehicle battery may be faulty	It is recommended that you consult with a certified mechanic.

NOTE:

If none of these troubleshooting tips work, please consult a certified mechanic for assistance.

CHARGING AN ELECTRONIC DEVICE USING 5V/2.4A USB OUTPUT PORT

1. Connect the Micro USB tip of the supplied Micro USB cable into the Micro USB input of your electronic device and connect the Standard USB end of the supplied Micro USB cable into either one of the HALO BOLT COMPACT USB 5V/2.4A Output ports.



NOTE:

If your electronic device does not have a Micro USB Input, your HALO BOLT COMPACT is also compatible with the charging cable provided with your electronic device. To use, plug the Standard USB end of the cable into either one of the two 5V/2.4A USB Output ports located on your HALO BOLT COMPACT .

2. Turn on the USB charging by pressing the USB Power ON/OFF Button on the HALO BOLT COMPACT .

NOTE:

The HALO BOLT COMPACT USB charging feature will automatically power off after 30 minutes of inactivity.

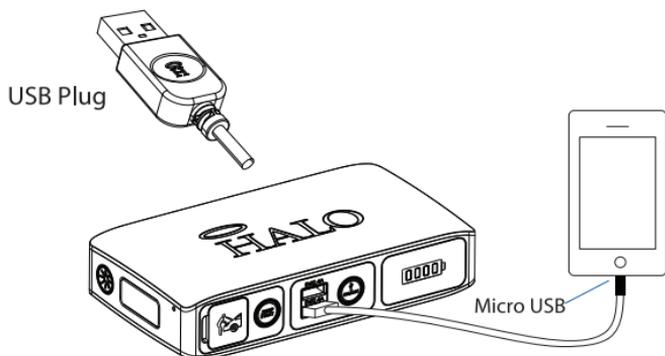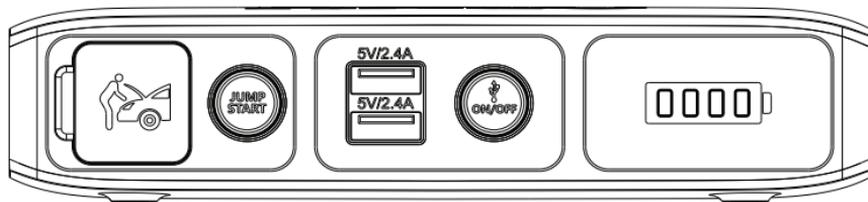

HALO SMART CHARGE TECHNOLOGY


Your HALO BOLT COMPACT contains the HALO SMART CHARGE TECHNOLOGY to achieve higher compatibility for charging standard 5V USB electronic devices. The HALO SMART CHARGE TECHNOLOGY will allow the HALO BOLT COMPACT to communicate with your electronic device and provide the fastest and safest charge for that device.

COMPATIBILITY

Standard 5V USB electronic devices including: Mobile phones, Tablets, PSP, NDS, MP3, MP4, MP5, Bluetooth, GPS, Cameras, and more.




Mobile Phones

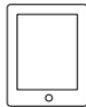

Tablets



Digital Cameras

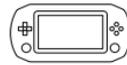


Mobile Gaming




USING YOUR HALO BOLT COMPACT FLOODLIGHT

The floodlight can be turned on and off by simply pressing and releasing the floodlight ON/OFF button. The first press will turn on the floodlight. Second press will turn on the red emergency light. Third press will turn on SOS flashing red light. Fourth press will turn the floodlight off. The floodlight will automatically turn off after 2 hours of inactivity.

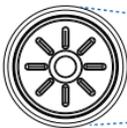

Floodlight ON/OFF Button

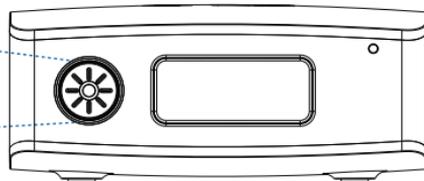

NOTE:

Do not look directly into the LED floodlight.

SPECIFICATIONS

Battery Cells:	3xLi-Polymer 4000mAh
Battery Pack Energy:	44400 mWh
Jump Start:	12V/400Amps
Input:	14V/0.85A
USB Output:	2x USB 5V/2.1A
Dimensions:	6.1 x 3.3 x 1.4 inches
Weight:	1.14 lbs

SAFETY PRECAUTIONS

- Read all instructions before using the product.
- Your HALO BOLT COMPACT should not be used to jump start unregistered vehicles.
- Make sure the jumper cables are fully plugged into the jump start output before trying to jumpstart your vehicle.
- Caution: The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not disassemble, expose to heat above 212°F (100°C) or incinerate.
- Misusing or incorrectly connecting your HALO BOLT COMPACT may cause electric shock to users and damage equipment.
- Your HALO BOLT COMPACT may become warm under extended high power operation. During operation, keep your HALO BOLT COMPACT away from materials that may be affected by these temperatures. Do not cover, wrap, or otherwise restrict the HALO BOLT COMPACT during operation.
- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Do not disassemble your HALO BOLT COMPACT. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your HALO

BOLT COMPACT if it has received a sharp blow, or has otherwise been damaged in any way.

- Do not expose your HALO BOLT COMPACT to moisture, water, rain, or snow.
- Do not insert any object into the ports or openings of your HALO BOLT COMPACT.
- Only charge your HALO BOLT COMPACT by the specified method with the specified charging adapter provided with the unit.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Keep your HALO BOLT COMPACT dry and away from moisture and corrosive materials. The HALO BOLT COMPACT should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not clean your HALO BOLT COMPACT with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Keep your HALO BOLT COMPACT away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that product heat.
- Do not puncture, crush or subject to mechanical shock.
- Make sure the HALO BOLT COMPACT's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Recharge your HALO BOLT COMPACT once every three months when not in use.

COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

LIMITED WARRANTY

HALO2CLOUD LLC. (HALO) warrants its products to be free from defects in material and workmanship under normal use. Conditions are as follows:

- During the first 90 days from date of purchase, HALO will repair or replace the defective product.
- HALO will, subject to inspection, repair the defective product or

replace it with a new or reconditioned unit. The return must be accompanied by a Return Merchandise Authorization (RMA) number to be issued upon request, and must be shipped prepaid.

- Where applicable, all requests for warranty returns must be accompanied by a proof of purchase.
- The warranty does not extend to the electronic equipment that is used, or incorporates with any of our products and accessories. HALO shall not be held responsible for the improper use of its products.
- In no event shall HALO be liable for any incidental, special, consequential or punitive damages arising out of the use of HALO's products.

For all questions or exchange requests, please call 888-907-6274, or email us at support@BestHALO.com.

This Limited Warranty sets forth the full scope of HALO's obligations and liabilities with respect to the product. All implied warranties, including without limitation the implied warranties of merchantability and fitness for a particular purpose, are limited to the duration of this Limited Warranty. In no event shall HALO be liable for any incidental, special, consequential or punitive damages or any damages or losses of or to electronic equipment or products that are used with any of HALO's products.



FOR TECHNICAL SUPPORT PLEASE
EMAIL US AT:

SUPPORT@BESTHALO.COM

OR

CALL US AT: **888-907-6274**

HALO
6 CENTRAL ROW
HARTFORD, CT 06103

WWW.BESTHALO.COM