

WARNING

AVOID EYE INJURY- Do not stare directly into beam or shine it directly into anyone's face. Doing so for more than a few seconds could cause retinal damage. Do not allow children to use LED lights unless under the supervision of an adult.



QUALITY GUARANTEE

This product is guaranteed against all defects in workmanship and materials for the original owner for one year from the date of purchase. Damage to or failure of the flashlight or any component thereof due to alteration, misuse, battery leakage or lack of maintenance will void any and all guarantees. Damage by leakage of batteries should be taken up with the manufacturer of the battery using their damage claim instructions. For any additional information call 1-800-255-6061.

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copywriting and the selection and arrangement ("Materials") thereof are ALL RIGHTS RESERVED
Copyright © 2019 Alliance Sports Group L.P.

INTERNATIONAL PATENTS PENDING

NEBO

MYPAL™



User Manual
Item #6891

LIGHTING INSTRUCTIONS

The MYPAL features 2 power buttons, the Light Mode Button and Alarm Button.

Light Mode Button

- Press 1x for HIGH
- Press 2x for MEDIUM
- Press 3x for LOW
- Press 4x for GREEN
- Press 5x for RED
- Press and hold for TURBO

Alarm Button

- Press and hold for 2 seconds to activate the ALARM / STROBE. Press any button to turn OFF.



MODE RECALL FEATURE

Mode Recall Feature remembers the last used light mode. If any light mode (except Turbo) is left on for more than 8 seconds, the next press of the Light Mode Button will turn the light OFF. When pressed again, the MYPAL will automatically recall the last used light mode. The normal light mode sequence (HIGH, MEDIUM, LOW, GREEN and RED) will begin upon the next press of the Light Mode Button, unless the Mode Recall Feature is again activated.

CHARGING INSTRUCTIONS

A Micro USB to USB charging cable is included to charge the MYPAL.

- Charging indicator will glow RED when battery is charging.
- Charging indicator will glow GREEN when battery is fully charged.

LIGHT MODES



HIGH
150 LUMENS
• 1 Hour
• 51 Meters



MEDIUM
50 LUMENS
• 2 Hours
• 31 Meters



LOW
15 LUMENS
• 5 Hours
• 18 Meters



GREEN
• 40 Hours
• 1 Meter



RED
• 40 Hours
• 1 Meter



TURBO MODE
400 LUMENS
• 40 Seconds
• 82 Meters



*NOTE: Before using the MYPAL, it is best to fully charge the unit.
(MYPAL should fully recharge in less than 2 hours)*