 


# HALO AIR+ BOLT™

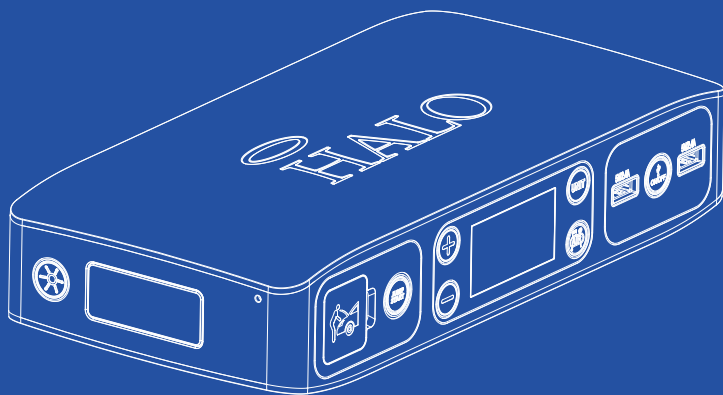

OPERATING INSTRUCTIONS  
PLEASE READ BEFORE OPERATING THIS EQUIPMENT



## **HALO BOLT AIR+**

Thank you for choosing HALO!

Powerful and loaded with features including a new, easy to use digital display, the HALO BOLT AIR+ can be used to safely jump start your vehicle or inflate your tires. The HALO BOLT AIR+ provides portable power so you can charge your phone, tablet and other electronic devices anywhere! The HALO BOLT AIR+ also includes a convenient floodlight and emergency light. Compact, versatile and simple to use, the HALO BOLT AIR+ and all accessories fit neatly in its carrying pouch and is perfect to store in your home or vehicle for every day use or an emergency need. Never be without a charge, a jump start, or with a flat tire again!

## SAFETY PRECAUTIONS

**DANGER-CAUTION Read and understand all safety information before using this product. Failure to follow these instructions may result in electrical shock, explosion, fire which may result in serious injuries, death or property damage.**

- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your HALO BOLT AIR+ may cause electric shock to users and damage equipment.
- Do not operate in explosive atmospheres such as in the presence of flammable liquids, gases or dust.
- Remove jump start clamps from vehicle battery after jump starting vehicle.
- Keep your HALO BOLT AIR+ dry and away from moisture and corrosive materials. The HALO BOLT AIR+ should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your HALO BOLT AIR+ to moisture, water, rain, or snow.
- Keep your HALO BOLT AIR+ away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your HALO BOLT AIR+ may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the HALO BOLT AIR+ during operation.
- Do not disassemble your HALO BOLT AIR+. There are no

user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.

 
- Do not drop or subject to strong impacts. Do not operate your HALO BOLT AIR+ if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- Only charge your HALO BOLT AIR+ by the specified method with the specified charging adapter provided with the unit.
- Do not use any non-HALO-branded accessories with the HALO BOLT AIR+. Doing so may cause electric shock to users and damage equipment.
- The HALO BOLT AIR+, along with its accessories, are not toys and should be kept away from children.
- Make sure the jumper cables are fully plugged into the jump start output before trying to jumpstart your vehicle.
- Do not touch red (positive) and black (negative) jumper clamps together at any point.
- Do not insert any foreign object into the ports or openings of your HALO BOLT AIR+.
- Do not clean your HALO BOLT AIR+ with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Make sure the HALO BOLT AIR+'s charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- When using the air compressor, always check and follow the manufacturer's recommended pressure. Use caution as the air hose and connectors may get hot after extended use.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Storage: 4°F - 158°F (-15°C - 70°C), Discharge: 14°F - 140°F (-10°C - 60°C), Charge: 32°F - 113°F (0°C - 45°C)

## **TABLE OF CONTENTS**






Safety Precautions	4-5
Included Items	7-8
Operating Instructions	9-16
Troubleshooting Guide	13
Specifications	17
Warranty and Contact Information	18-19

## INCLUDED ITEMS

- HALO BOLT AIR+
- Jumper Cables
- USB to Micro USB Cable
- Carrying Pouch
- Car Charging Adapter
- Wall Charging Adapter
- Interchangeable Air Nozzle Kit
- 24 Inch Air Hose Extension

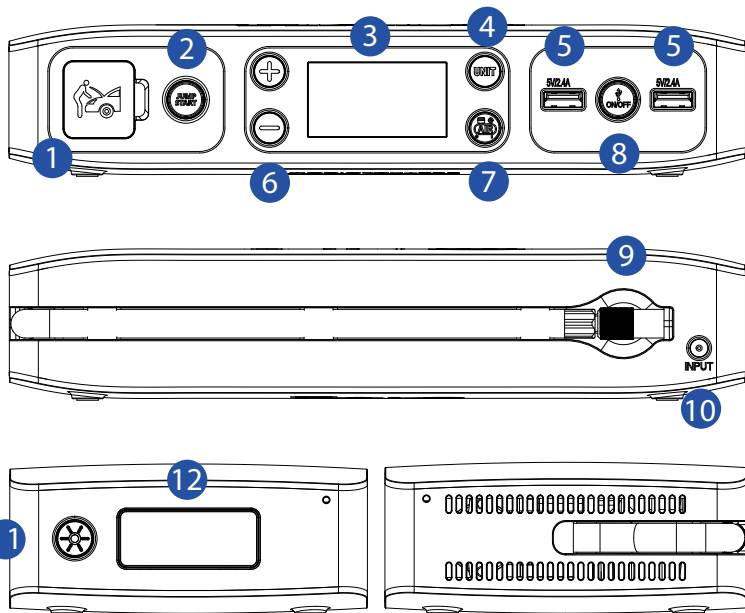

- 1 | Jump Start Output
- 2 | Jump Start Button
- 3 | Digital Screen
- 4 | Pressure Unit Button
- 5 | USB Outputs
- 6 | Pressure Settings (+) and (-)
- 7 | Air Compressor ON/OFF Button
- 8 | USB ON/OFF Button
- 9 | Air Hose
- 10 | Charging Input
- 11 | Floodlight ON/OFF Button
- 12 | Floodlight/Emergency Light
- 13 | 24 Inch Air Hose Extension
- 14 | Jumper Cable Clamps
- 15 | Tapered Air Nozzle
- 16 | Inflation needle
- 17 | Presta Valve Adapter
- 18 | Wall Charging Adapter
- 19 | Car Charging Adapter

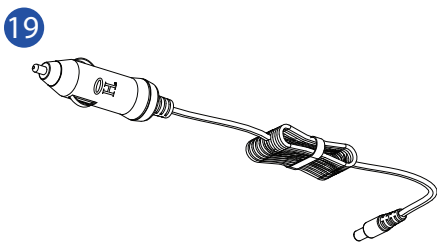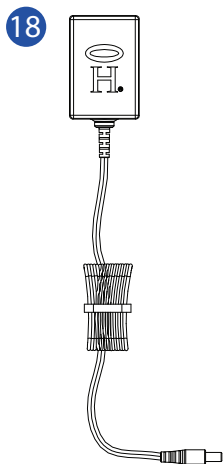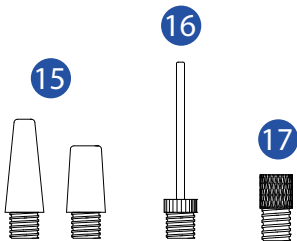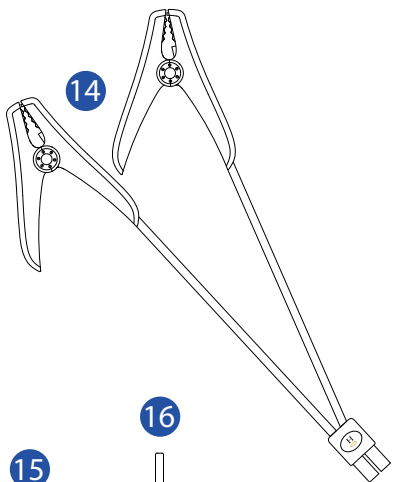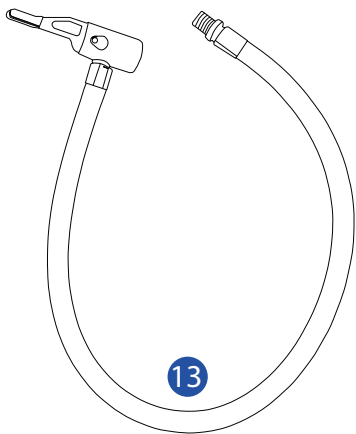     




## OPERATING INSTRUCTIONS

### CHARGING YOUR HALO BOLT AIR+

 To charge your HALO BOLT AIR+, use the provided Wall Charging Adapter, and plug the AC adapter plug into the charge input. Next, connect the AC adapter into a wall outlet. The HALO BOLT AIR+ will automatically begin charging. When the HALO BOLT AIR+ is fully charged, all five battery indicator lights will be solid green and the digital screen will indicate 100% charge. (This could take up to 9 hours).

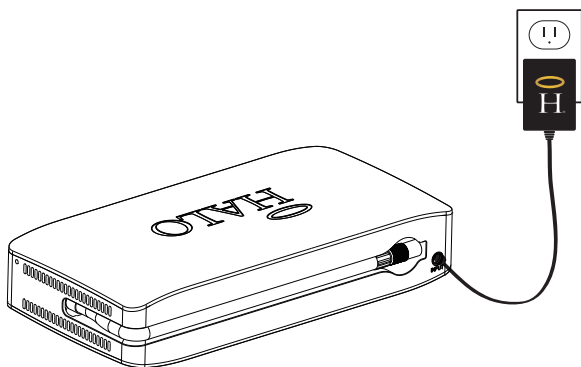


While charging, the digital screen will illustrate the charge percentage of the HALO BOLT AIR+. When fully charged, disconnect the cable.




**NOTE:**

 The HALO BOLT AIR+ is designed to charge between 32°F-113°F (0-45° C). A "TEMP" indicator will be illustrated on the digital display if the HALO BOLT AIR+ is attempted to be charged outside of this temperature range.

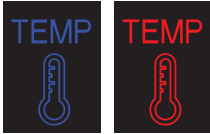


 When you're on the road, you can also use the supplied Car Charging Adapter to charge your HALO BOLT AIR+.

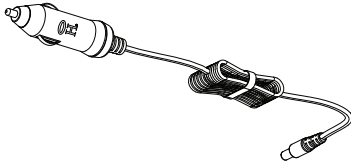

# JUMP STARTING YOUR VEHICLE WITH THE HALO BOLT AIR+

 
1. Plug the jumper cables into the jump start output on the HALO BOLT AIR+.

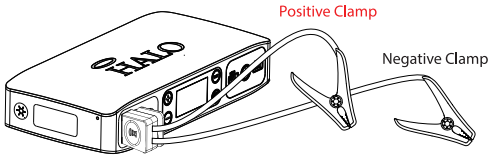

## NOTE:

Make sure the jumper cables are fully plugged into the jump start output before trying to jump your vehicle.

 
2. Attach the jumper cable clamps to the vehicle battery.
  - Red clamp on positive terminal (+)
  - Black clamp on negative terminal (-)

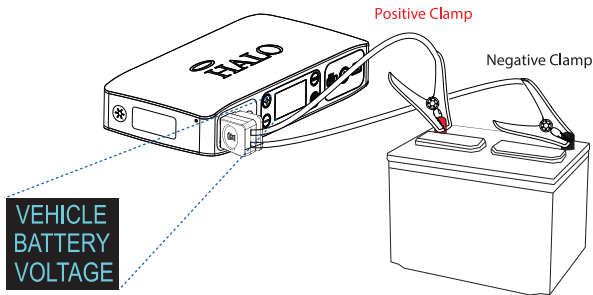

## NOTE:

- Once the jumper cable clamps are attached to the vehicle battery, the LCD will display the vehicle battery voltage.
- Do not touch red (positive) and black (negative) clamps together at any point. If the jump start button flashes red, the jumper cables have been connected incorrectly. If this flashing red condition occurs, disconnect the jumper cables from vehicle battery and restart the process from Step 1.

 3. Press the “Jump Start” button and wait for solid green light.

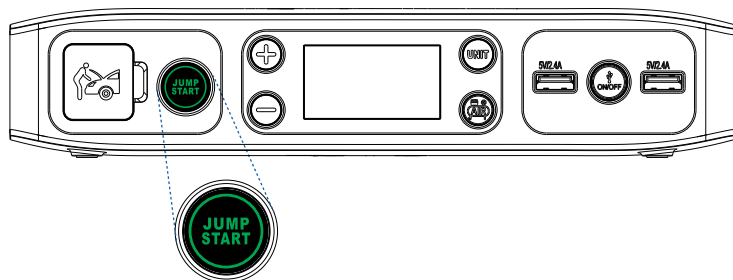

**NOTE:**

A flashing green light indicates safety checks are in progress.

4. Start your vehicle.

**NOTE:**

If your vehicle fails to start after the first attempt, wait 30 seconds and repeat step 3 and step 4.

If your vehicle does not start after three attempts, we recommend you consult a certified mechanic.

5. Disconnect the jumper cable clamps from the car battery.





**NOTE:**

The jump start function can not be used in conjunction with USB charging or the air compressor. Please ensure that you have not activated the USB or Air Compressor output modes when attempting to jump start your vehicle.

**NOTE:**

The HALO BOLT AIR+ is designed to allow a jump start when used within a safe temperature range. A "TEMP" indicator will be illustrated on the digital display if used outside of the temperature operating range.

# JUMP START TROUBLESHOOTING TIPS

Condition	Potential Cause	Solution
HALO BOLT AIR+ Jump Start button has been pressed but nothing happens	The USB ON/OFF Button or the Air Compressor ON/OFF Button has been pressed.	The jump start output can not be used in conjunction with the USB output or air compressor modes. Ensure that both USB and AIR Compressor modes are off.
 HALO BOLT AIR+ displays a red "BATT TOO LOW" message	The HALO BOLT AIR+ is not sufficiently charged to jump start the vehicle.	Recharge the HALO BOLT AIR+ and verify at least 50% charged. Then try the jump start process again.
 HALO BOLT AIR+ Jump Start button flashes red and a SAFETY CHECK FAIL message is displayed	The jumper cables have not been properly connected to the vehicle battery.	Check the jumper cables and ensure that the red clamp is connected to the positive terminal (+) and the black clamp is connected to the negative terminal (-).
 HALO BOLT AIR+ Jump Start button flashes green continuously	The HALO BOLT AIR+ is waiting to be connected to a battery or a SAFETY CHECK FAIL has been triggered.	Check the jumper cables and ensure they are properly connected to the battery. Check and ensure the vehicle battery voltage is greater than 2.0V. If the SAFETY CHECK FAIL indicator is triggered during the jump start process, it is recommended that you consult with a certified mechanic.
 HALO BOLT AIR+ displays a blue or red "TEMP" indicator	The HALO BOLT AIR+ has detected a low or high temperature condition.	Disconnect the HALO BOLT AIR+ and allow unit to acclimate to temperature operating range (14°F-122°F).
You can not successfully jump start your vehicle. The HALO BOLT AIR+ displays a vehicle battery voltage greater than 12.0V	The HALO BOLT AIR+ detects that it is connected to a vehicle battery with a normal starting voltage. This could indicate that another vehicle component is faulty.	It is recommended that you consult with a certified mechanic.
HALO BOLT AIR+ Jump Start and On/Off button flashes red and blue	This could occur when attempting to jump start a vehicle while other electrical components (i.e. headlights, heater, radio, etc.) are on.	Turn off your headlights and any other components that may drain your car battery and try the jump start process again.
	The vehicle battery may be faulty.	It is recommended that you consult with a certified mechanic.

 
## NOTE:

If none of these troubleshooting tips work, please consult a certified mechanic for assistance.

## HALO BOLT AIR+ COMPRESSOR

The HALO BOLT AIR+ comes equipped with a 24 Inch Air Hose Extension and Interchangeable Air Nozzles. Simply twist on the corresponding nozzle to inflate balls, pool floaties, bike tires, and more!

1. Connect the air hose to the tire or use the appropriate nozzle to connect to your inflatable device
2. Press the (+) or (-) button to set the desired pressure. The pressure measuring units can be changed by pressing the UNIT button.
3. Once the desired pressure has been set, begin inflating by pressing the Air Compressor ON/OFF button. The air compressor will shut off automatically once the pressure has been reached.

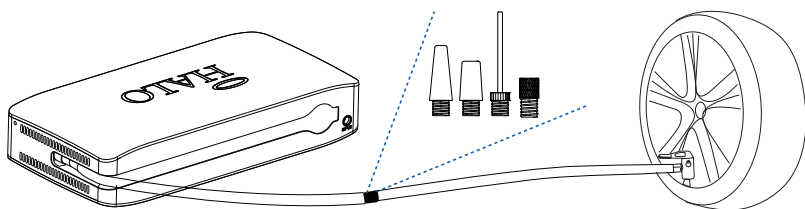

### NOTE:

The air compressor can be started or stopped at any point by pressing the air compressor ON/OFF button. The (+) and (-) may be long pressed to set the desired pressure quickly.



Note: Always check and follow the manufacturer's recommended pressure. Use caution as the air hose and connectors may get hot after extended use. The HALO BOLT AIR+ compressor is designed to automatically stop after an extended run-time or if an over-temperature protection set point is reached.

 
## CHARGING AN ELECTRONIC DEVICE USING 5V/2.4A USB OUTPUT PORT

1. Connect the Micro USB tip of the supplied Micro USB cable into the Micro USB input of your electronic device and connect the Standard USB end of the supplied Micro USB cable into either one of the HALO BOLT AIR+ USB 5V/2.4A Output ports.

### NOTE:


If your electronic device does not have a Micro USB Input, your HALO BOLT AIR+ is also compatible with the charging cable provided with your electronic device. To use, plug the Standard USB end of the cable into either one of the two 5V/2.4A USB Output ports located on your HALO BOLT AIR+.

2. Turn on the USB charging by pressing the USB Power ON/OFF Button on the HALO BOLT AIR+.

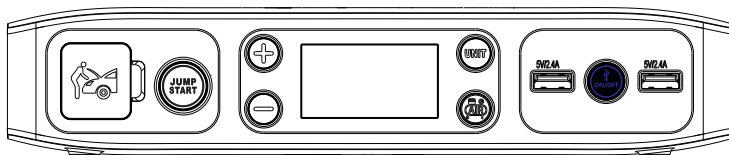

### NOTE:

 The HALO BOLT AIR+ USB charging feature will automatically power off after 30 minutes of inactivity.

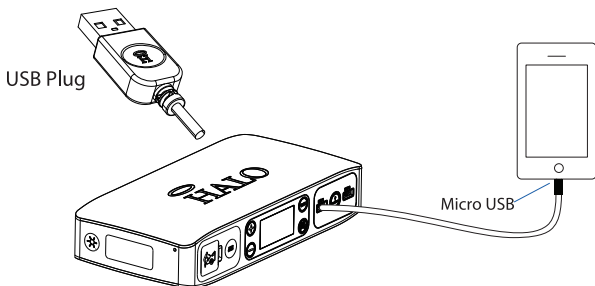

## HALO SMART CHARGE TECHNOLOGY

Your HALO BOLT AIR+ contains the HALO SMART CHARGE TECHNOLOGY to achieve higher compatibility for charging standard 5V USB electronic devices. The HALO SMART CHARGE TECHNOLOGY will allow the HALO BOLT AIR+ to communicate with your electronic device and provide the fastest and safest charge for that device.

## COMPATIBILITY

Standard 5V USB electronic devices including: Mobile phones, Tablets, PSP, NDS, MP3, MP4, MP5, Bluetooth, GPS, Cameras, and more.



Mobile Phones



Tablets



Digital Cameras

 


Mobile Gaming




## USING YOUR HALO BOLT AIR+ FLOODLIGHT

The floodlight can be turned on and off by simply pressing and releasing the floodlight ON/OFF button. The first press will turn on the floodlight. Second press will turn on the red emergency light. Third press will turn on SOS flashing red light. The floodlight will automatically turn off after 2 hours of inactivity.



Floodlight ON/OFF Button

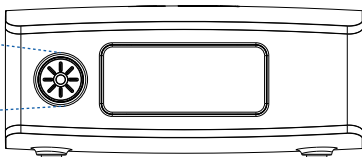 

### NOTE:

Do not look directly into the LED floodlight.



## SPECIFICATIONS

Battery Cells:	3x Li-Polymer 5000mAh
Battery Pack Energy:	55500 mWh
Jump Start:	12V/600Amps
Air Compressor:	100PSI max
Input:	14V/0.85A
USB Output:	2x USB 5V/2.4A
Dimensions:	4.65 x 9.52 x 1.85 inches
Weight:	2.54 lbs
Operating Temperature (During Charging)	32°F - 113°F (0°C - 45°C)
Operating Temperature	14°F - 122°F (-10°C - 50°C)

## COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

## **LIMITED WARRANTY**

HALO2CLOUD LLC. (HALO) warrants its products to be free from defects in material and workmanship under normal use. Conditions are as follows:

- During the first 90 days from date of purchase, HALO will repair or replace the defective product.
- HALO will, subject to inspection, repair the defective product or replace it with a new or reconditioned unit. The return must be accompanied by a Return Merchandise Authorization (RMA) number to be issued upon request, and must be shipped prepaid.
- Where applicable, all requests for warranty returns must be accompanied by a proof of purchase.
- The warranty does not extend to the electronic equipment that is used, or incorporates with any of our products and accessories. HALO shall not be held responsible for the improper use of its products.
- In no event shall HALO be liable for any incidental, special, consequential or punitive damages arising out of the use of HALO's products.

For all questions or exchange requests, please call 888-907-6274, contact us at [zagg.com/support](http://zagg.com/support) or visit [www.zagg.com/warranty-policies](http://www.zagg.com/warranty-policies).

This Limited Warranty sets forth the full scope of HALO's obligations and liabilities with respect to the product. All implied warranties,

including without limitation the implied warranties of merchantability and fitness for a particular purpose, are limited to the duration of this Limited Warranty. In no event shall HALO be liable for any incidental, special, consequential or punitive damages or any damages or losses of or to electronic equipment or products that are used with any of HALO's products.



FOR TECHNICAL SUPPORT PLEASE  
CONTACT US AT:

**ZAGG.COM/SUPPORT**  
OR  
CALL US AT: **888-907-6274**

**HALO**  
**910 W LEGACY CENTER WAY**  
**STE. 500, MIDVALE, UTAH 84047**

**WWW.ZAGG.COM/HALO**

© 2020 ZAGG Inc | [www.ZAGG.com/HALO](http://www.ZAGG.com/HALO)  
The HALO and H trademarks are the property of ZAGG Inc.  
All rights reserved.

ZAGG Inc | 910 W Legacy Center Way, Ste. 500, Midvale, Utah 84047  
Made in China.

